

# THICKNESS system variable

1875 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 1789

## Function Description:

The **THICKNESS** system variable is used to set default 3D thickness property when creating 2D geometric objects.

**Type :** Real

**Saved in :** Drawing

**Initial value :** 0.0000

**Note:** when users want to add 3D thickness to new created objects by **RECTANG** and **TEXT** commands, there is one exception, the 3D thickness property will use Property palettes or separate settings by **CHPROP** command. The single text must be SHX font to accept 3D thickness.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1875>