

TILEMODE system variable

1877 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 2495

Function Description:

The **TILEMODE** system variable is used to control whether it is allowed to access paper space.

Type : Integer

Saved in : Drawing

Initial value : 1

Range : 0,1

System Variable Value:

0 : allow to access paper space and set the recently accessed layout to be current

1 : forbid to access paper space and set the model space to be current

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1877>