

# TRACKPATH system variable

1883 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 2190

## Function Description:

The **TRACKPATH** system variable is used to control the display of alignment path for polar track and object snap track.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 0

**Range** : 0,1,2,3

## System Variable Value:

**0** :display polar track and object snap track path in full screen

**1** : display polar track path in full screen ;only display the object snap track path from alignment point to cursor location starting point

**2** : display object snap track path; do not display polar track path

**3** : do not display polar track path; only display the object snap track path from alignment point to cursor location starting point

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1883>