

TSTACKALIGN system variable

1891 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 2271

Function Description:

The **TSTACKALIGN** system variable is used to control the vertical alignment for stacked text.

Type : Integer

Saved in : Drawing

Initial value : 1

Range : 0,1,2

System Variable Value:

0 : bottom aligned

1 : center aligned

2 : top aligned

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1891>