

TSTACKSIZE system variabl

1892 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 2133

Function Description:

The **TSTACKSIZE** system variable is used to control the height of fraction of stack text relative to the current height percentage of selected text.

Type : Integer

Saved in : Drawing

Initial value : 70

Range : 25 ~ 125

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1892>