

# UCSNAME system variable

1897 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 2633

## Function Description:

The **UCSNAME** system variable is used to store the current users coordinate name in current viewport of current space.

(Read-Only)

**Type** : Strings

**Saved in** : Drawing

If the current **UCS** has not been named, it returns a null character string.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1897>