

# UCSVP system variable

1900 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 2163

## Function Description:

The **UCSVP** system variable is used to determine whether the UCS in other viewport is dependent or independent of UCS in current viewport.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 1

**Range** : 0,1

## System Variable Value:

**0** : unlocked; the UCS reflects the current UCS of current viewport

**1** : lock; the UCS stores in viewport and independent of the UCS of the current viewport

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1900>