

# UCSYDIR system variable

1902 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 2093

## Function Description:

The **UCSYDIR** system variable is used to store the Y direction of current UCS in current viewport of current space.

(Read-Only)

**Type** : 3D point

**Saved in** : Drawing

**Initial value** : 0.0000,1.0000,0.0000

The Y direction of UCS could be different for each viewport.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1902>