UNDOCTL system variable

1903 GstarCAD MY /KW July 28, 2021 System Variables 0 1815

Function Description:

The **UNDOCTL** system variable is used to display options used in UNDO command. (Read-Only)

Type: Integer

Saved in: Not saved **Initial value**: 53

The setting is stored as a bitcode using the sum of listed system variable values.

System Variable Value:

0 : turn off UNDO

1: turn on UNDO

2 : only one command could be undone

4 : only one command could be undone

8 : one group is active

16: treat ZOOM and PAN as one single action32: treat ZOOM and PAN as one single action

Online URL: https://www.kb2.gstarcad.com.my/article.php?id=1903