

UNITMODE system variable

1905 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 2693

Function Description:

The **UNITMODE** system variable is used to display format of units.

Type : Integer

Saved in : Drawing

Initial value : 0

Range : 0,1

System Variable Value:

0 : display fractional, feet-inches, and surveyor' angle according to Report format separated by spaces

1 : display fractional, feet-inches, and surveyor' angle according to Input format without including spaces, but substituting dashes for spaces in some cases.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1905>