

VIEWDIR system variable

1907 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 2168

Function Description:

The **VIEWDIR** system variable is used to store the view direction by UCS coordinates in current viewport.

(Read-Only)

Type : 3D vector

Saved in : Drawing

Initial value : 0.0000,0.0000,1.0000

It describes the camera point as the 3D offset value of target point.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1907>