

VIEWMODE system variable

1908 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 2052

Function Description:

The **VIEWMODE** system variable is used to store view settings of current viewport.
(Read-Only)

Type : Integer

Saved in : Drawing

Initial value : 0

Range : 0,1,2,4,8,16

System Variable Value:

0 : turn off

1 : perspective view active

2 : turn clipping front on

4 : turn clipping back on

8 : turn on UCS follow mode

16 : front clipping is not at eye. If this system variable is on, the front clip distance (**FRONTZ**) determines the front clipping plane. If this system variable is off, **FRONTZ** is ignored, and the front clipping plane is set to pass through the camera point (vectors behind the camera are not displayed). This flag is ignored if the front-clipping bit (2) is off.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1908>