

# VSMAX system variable

1913 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 2055

## Function Description:

The **VSMAX** system variable is used to store the top-right on the virtual screen of current viewport.  
(Read-Only)

**Type :** 3D point

**Saved in :** Drawing

**Initial value :** Unknown

This value is expressed by UCS coordinates.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1913>