

# VSMIN system variable

1914 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 2235

## Function Description:

The **VSMIN** system variable is used to store the bottom-left on the virtual screen of current viewport.  
(Read-Only)

**Type** : 3D point

**Saved in** : Drawing

**Initial value** : Unknown

This value is expressed by UCS coordinates.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1914>