

WRITESTAT system variable

1921 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 2283

Function Description:

The **WRITESTAT** system variable is used to indicate whether the drawing file is Read only or editable. (Read-Only)

Type : Integer

Saved in : Not saved

Initial value : 1

Range : 0,1

System Variable Value:

0 : write to drawings disabled

1 : enable to write to drawings

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1921>