

# 3DMOVE command

1940 GstarCAD MY /KW July 30, 2021 [CAD Commands](#) 0 2405

The **3DMOVE** command is used to move 3D model to the specified direction and distance.

## Command Access:

**Ribbon** : 3D > 3D Operations > 3D Move

**Menu** : Modify > 3D Operations> 3D Move

**Command** : 3DMOVE

## Command Prompts:


Select object:

Specify base point or [Displacement] <Displacement>:

Specify second point or <use first point as displacement>:

## Function Description:

Users could move objects and sub objects freely or move constraint to specified axis or plane.

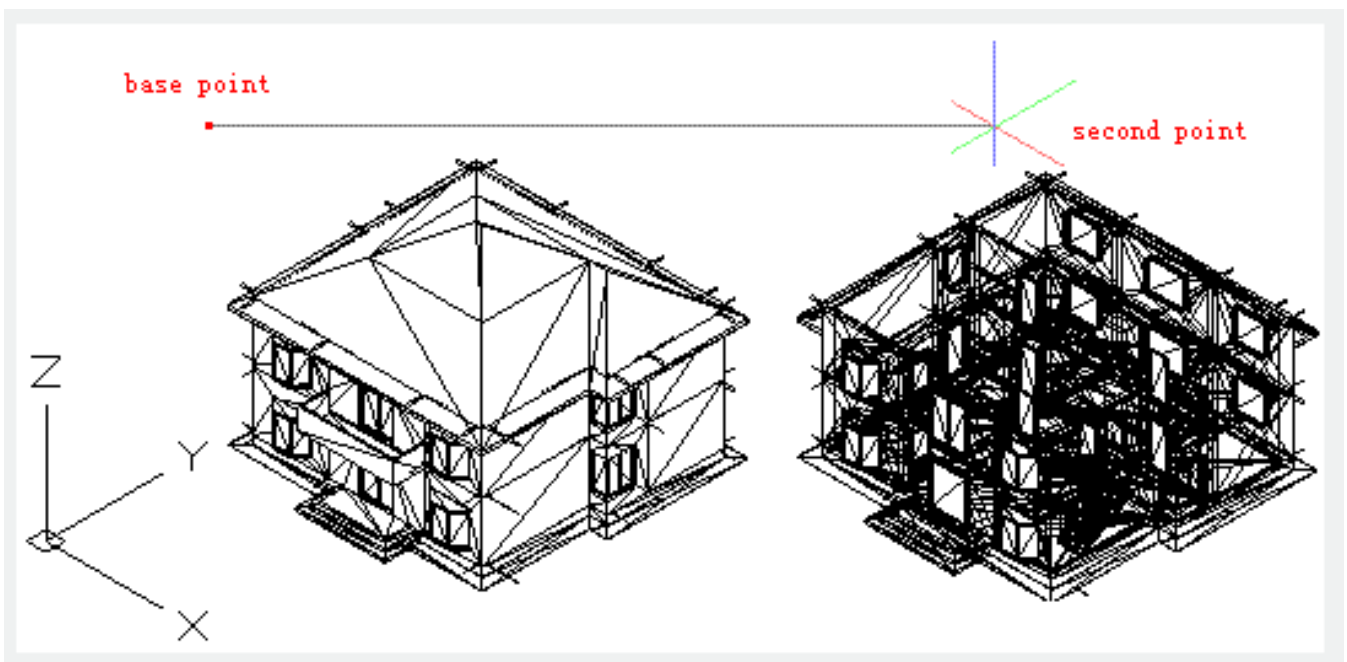

## Relative Glossary:

### Select object:

Select object to be moved and press ENTER.

### Base point:

Specify base point of 3D object for moving.

### Displacement:

Input the coordinate under the command prompt to specify the relative distance and direction of selected 3D object.

**Second point:**

Specify the final position for 3D object. Users could move cross cursor to specify direction or input displacement.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1940>