

## BVSTATE command


2023 GstarCAD MY /KW August 5, 2021 [CAD Commands](#) 0 2838

The **BVSTATE** command is used to create, set or remove visibility states from dynamic block.

### Command Access:

**Command** : BVSTATE

### Function Description:

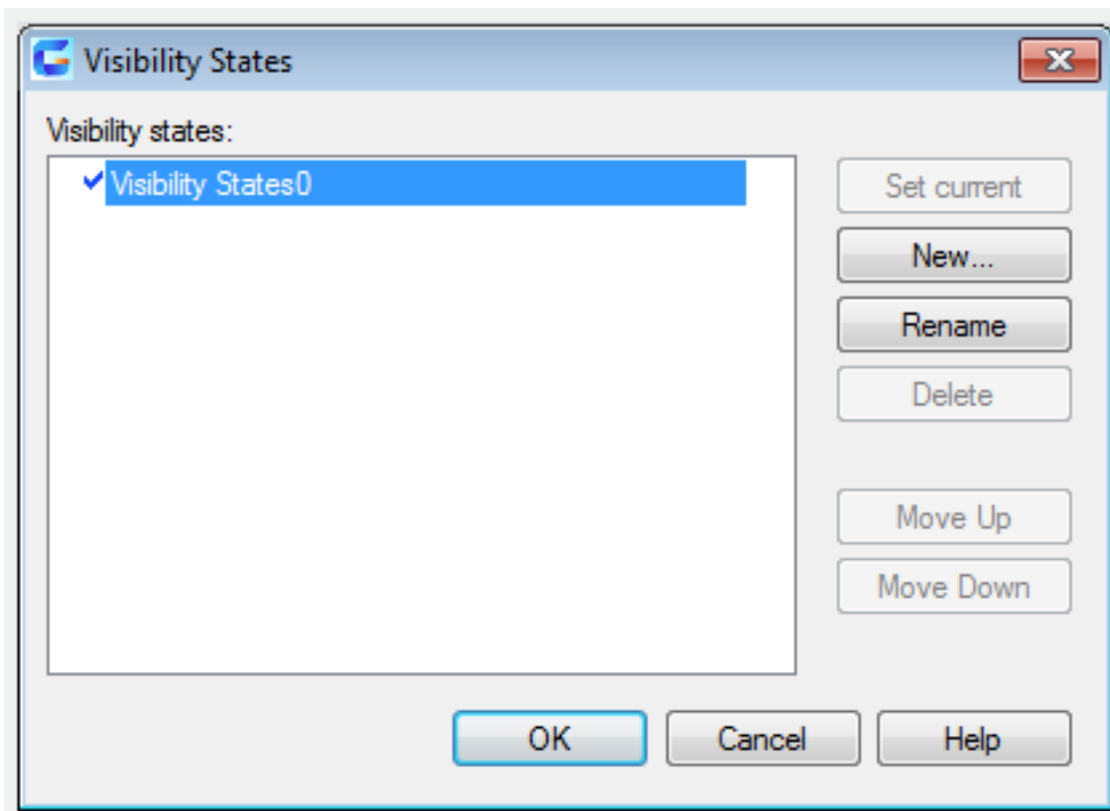

After inserting visibility parameter to block definition, users could edit it in "Visibility States" dialog box.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2023>