

DIMDISASSOCIATE command

2081 GstarCAD MY /KW August 11, 2021 [CAD Commands](#) 0 2928

The **DIMDISASSOCIATE** command is used to remove association of selected dimension.

Command Access:

Command : DIMDISASSOCIATE

Command Prompts:

Select dimensions to disassociate::

Select object:

Function Description:

This command could filter selection set and make it only contains associative dimensions on unlocked layers and in current space (for example, if the model space is active, associative dimensions in paper space are excluded), and then it removes association of all dimensions and reports numbers of filtered dimensions and removed dimensions.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2081>