

EXPORTLAYOUT command

2119 GstarCAD MY /KW August 13, 2021 [CAD Commands](#) 0 2146


The **EXPORTLAYOUT** command is used to save all visible objects in current layout to model space of new drawing.

Command Access:

Command : EXPORTLAYOUT

Function Description:

The exported objects are reappearing in new model space. Users could clip, zoom, copy, or explode them.

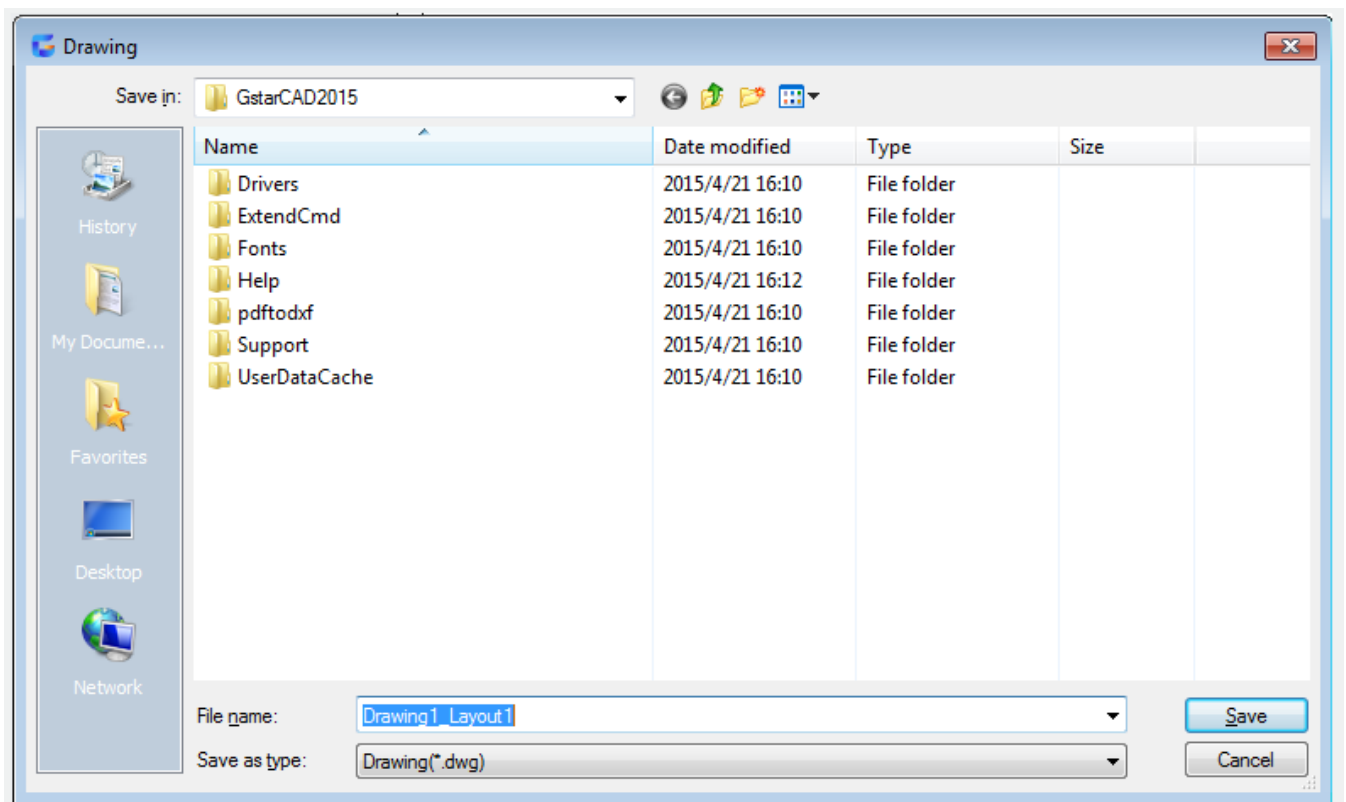

Users could specify a new file name and location. All exported layouts are saved in drawings (*.dwg).

Note: the EXPORTLAYOUT command could only be used in layout. When editing block, reference, or maximizing the viewport, this command is disabled in model space.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2119>