

# LTSCALE command

2211 GstarCAD MY /KW August 17, 2021 [CAD Commands](#) 0 2468

The **LTSCALE** command is used to set the linetype scale of the whole drawing.

### Command Access:


**Command :** LTSCALE

### Command Prompts:

Enter new linetype scale factor: <1.0000>:

### Command Prompts:

Changes of linetype scale will lead to drawing regeneration. They will be applied on all objects in drawing

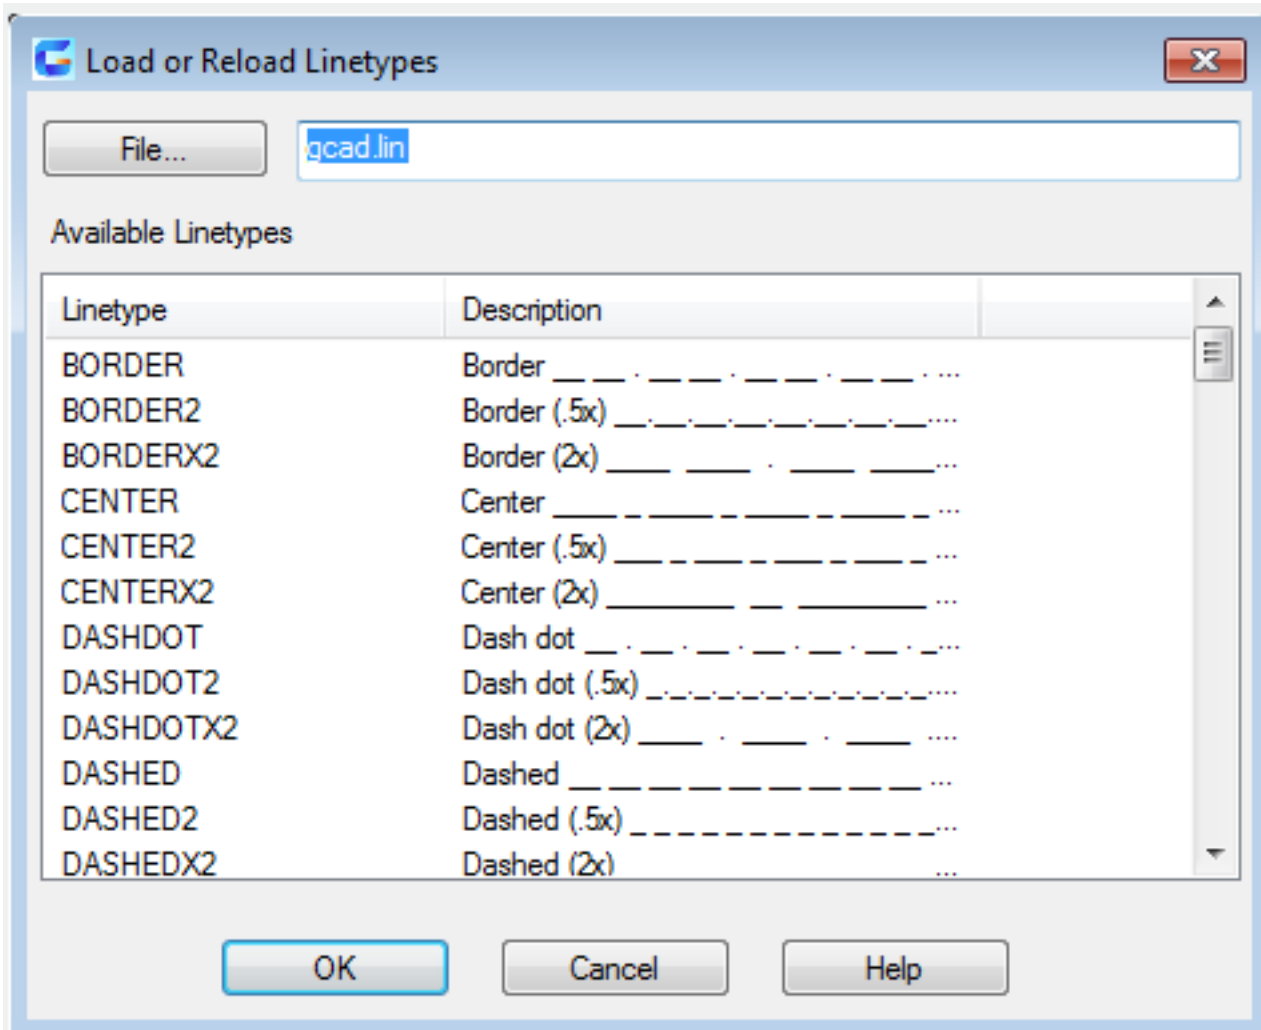

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2211>