

## QLDETACHSET command

2302 GstarCAD MY /KW August 20, 2021 [CAD Commands](#) 0 2563

The **QLDETACHSET** command detach leader line from mtext, tolerance, or block reference object.

**Command Access :**

**Command Entry :** QLDETACHSET


**Menu :** Express>Dimension>Detach Leaders from Annotation

**Select objects :** Select leader line


**Usage Example:**

Select a leader line to detach from an mtext object.

Leader with mtext object attached:

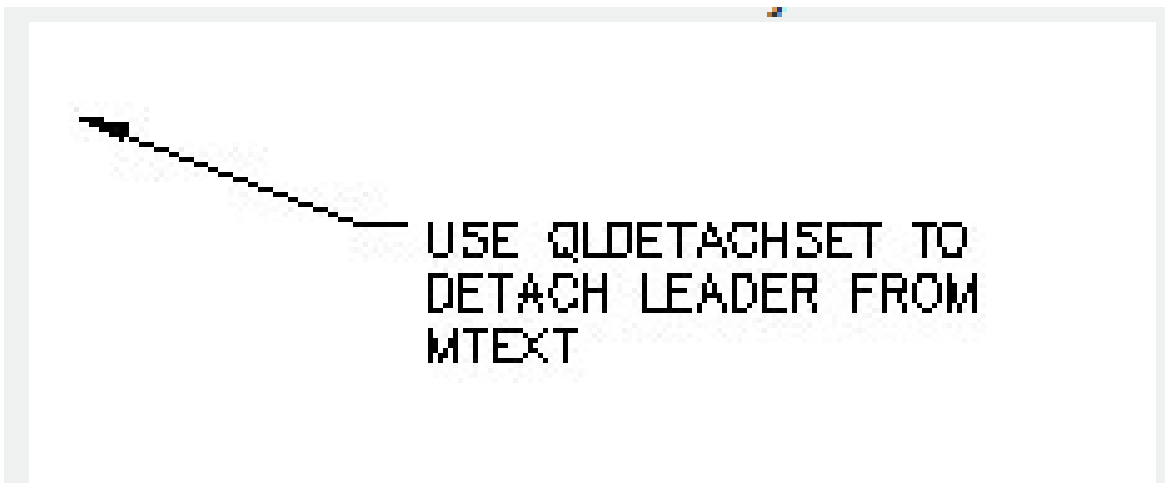

Leader detached from the mtext object, which can then be moved.

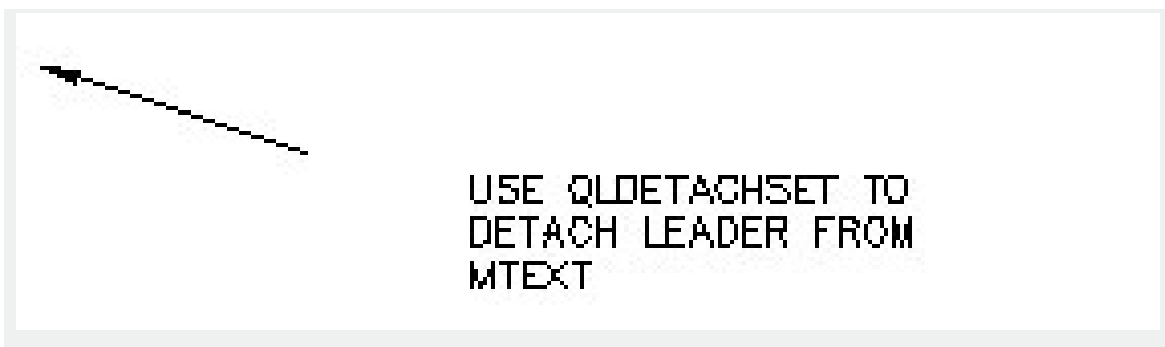

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2302>

