


# RAPIDDIST command

2312 GstarCAD MY /KW August 20, 2021 [CAD Commands](#) 0 2282


The **RAPIDDIST** command, which measures distance and angle between 2D objects along X, Y axis rapidly by moving your mouse.

Distances that only can be measured along X, Y axis based on the position of your mouse, are displayed dynamically as you move your mouse over and between objects. Angles between the objects touched by distance lines, are displayed dynamically at the same time

**Command Access :** RAPIDDIST

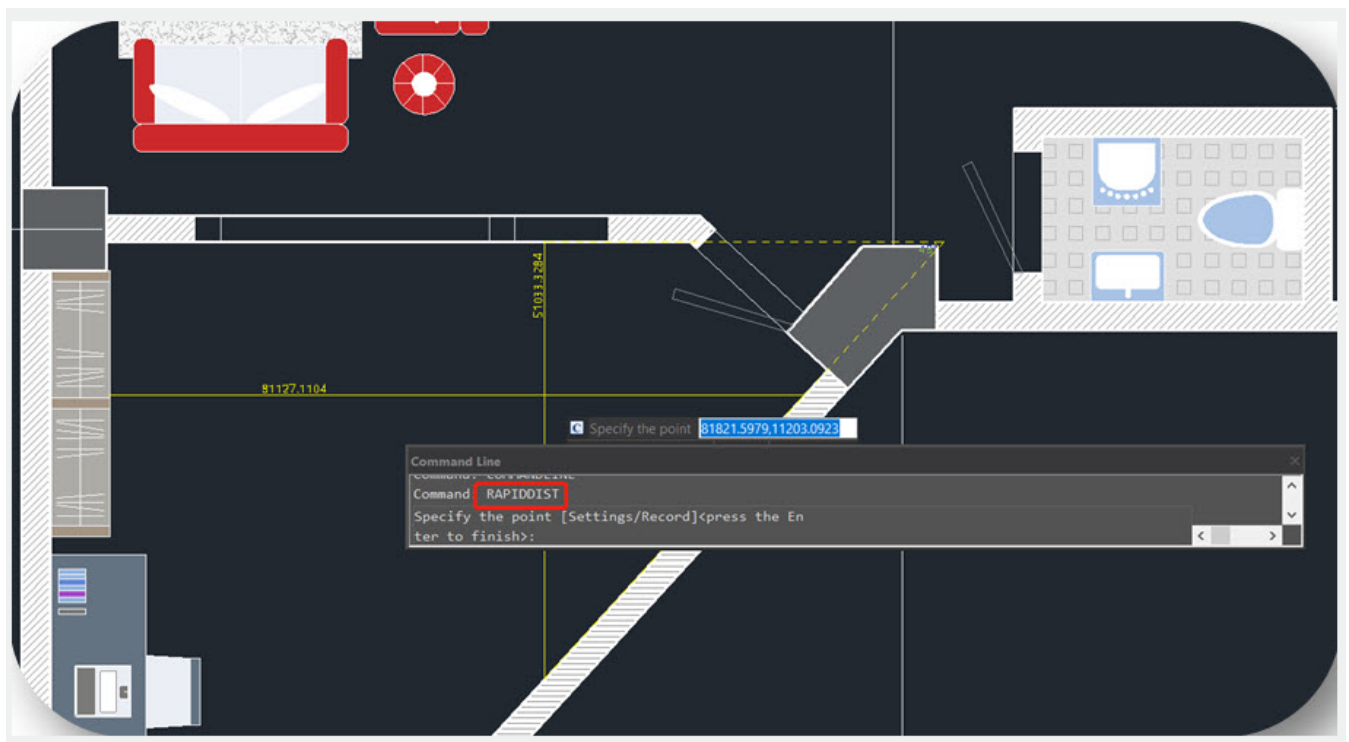

Type “**Settings**”, you can set unit conversion and scale in setting window.

 Settings

Scale

Annotation

Scale

1

:

10

Unit

Units From

cm

Convert To

inch

Type “**Record**”, You can save the current result in command line window, which is convenient to check or copy data to other documents.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2312>