

REINIT command


2326 GstarCAD MY /KW August 20, 2021 [CAD Commands](#) 0 2436

The **REINIT** command is used to reinitialize digitizer, IO ports of digitizer and program parameter files.

Command Access:

Command : REINIT

Function Description:

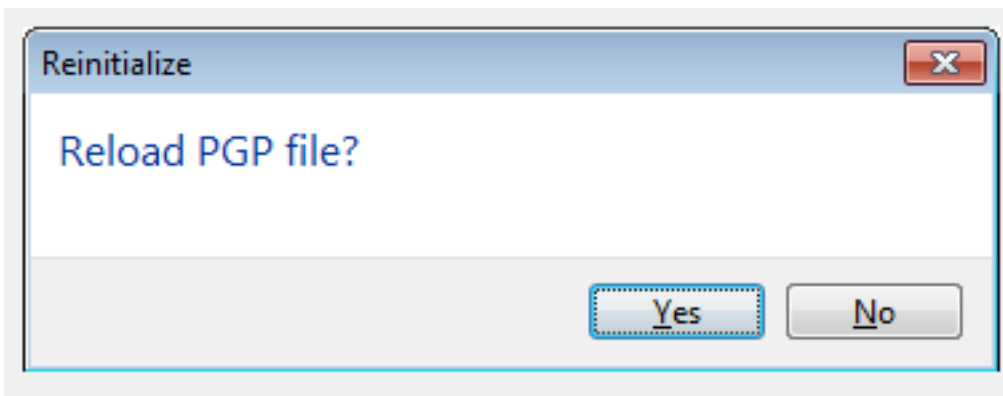

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2326>