

# RESETBLOCK command

2330 GstarCAD MY /KW August 20, 2021 [CAD Commands](#) 0 2575

The **RESETBLOCK** command is used to reset one or more dynamic block references to default value of block definitions.

## Command Access:

**Command** : RESETBLOCK

**Shortcut** : select one dynamic block reference, right-click and select "Ret block"

## Command Prompts:

Select object:

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2330>