


# Set the Current Linetype

2482 GstarCAD MY /KW November 9, 2021 [Workflow](#) 0 2614

The current **LINETYPE** is shown in the Linetype control on the Properties toolbar and all objects you draw will use the current linetype.

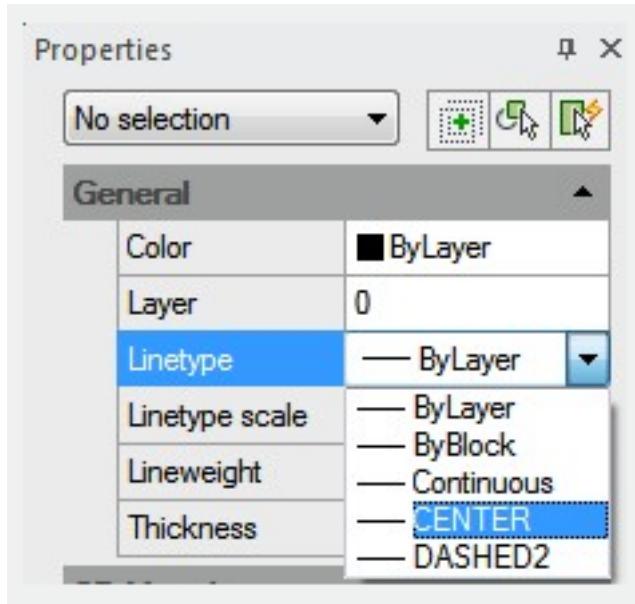

You can also set the current linetype with the Linetype control. If you set current linetype to **BYLAYER**, all objects are created with linetype of current layer.

If you set the current linetype to **BYBLOCK**, objects use the **CONTINUOUS** linetype until the objects are grouped into a block. When the block is inserted into the drawing, those objects will use the current linetype. Linetypes for text, points, viewports, hatches and blocks are not displayed.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2482>