

Change the Lineweight of an Object

2488 GstarCAD MY /KW November 9, 2021 [Workflow](#) 0 2274

To change the [LWEIGHT](#) of an object, you can do :

- If an object's linewidth is set to BYLAYER, move it to another layer with a different linewidth, the object will acquire the linewidth of the new layer.
- If an object's linewidth is set to BYLAYER, you can modify the linewidth of the layer the object is on.
- Choose another linewidth for an object..

If you change the current linewidth setting on the Properties toolbar from BYLAYER to a specific linewidth, all newly created object's linewidth will be set to the new linewidth.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2488>