## **Change Text**

## 2628 GstarCAD MY /KW November 11, 2021 Workflow 0 1931

When there are several texts in the drawing which need to be modified, it would be much more tedious and inefficient to modify them one by one. Change text allows users make bulk modifications to several texts. For example, this function can modify the alignment, height, width, position, rotation, style and content of several texts simultaneously. It greatly improves the efficiency of single text and Mtext modifications. You can access it from:

Menu: Text>Change Text

Command Entry: Changetext

For example, in a table or part list created, we can apply change text. After the command is started, a message will be displayed in the command line >

Please select object:

Then select the text to be modified, immediately a prompt message will be displayed>

Height (H) / Justify (J) / Location (L) / Rotation (R) / Style (S) / Text (T) / Undo (U) / Width (W):

Height :Changes the text height. Within this option there are three more: Single (I) / List (L) / New height for all objects:

Single: This changes the text height one by one.

List: This shows the text information such as: Min. and Max. text height and average.

New Height for all objects: This changes the height of the selected text at once.

PART LIST		PART LIS	PART LIST			
SMALL BUSHINGS	3	SMALL BUSHINGS	3			
SHAFT	1	SHAFT	1			
SUB - BASE PLATE	1	SUB - BASE PLATE	1			
MULTI-HOLE BASE PLATE	1	MULTI-HOLE BASE PLATE	1			
THREADED SHAFT	1	THREADED SHAFT	1			
BUSHING "B"	2	BUSHING "B"	2			
SUPPORT PLATE	1	SUPPORT PLATE	1			
BUSHING "A"	1	BUSHING "A"	1			
BMW - THREADED PIN "B"	1	BMW - THREADED PIN "B"	1			
BMW - THPEADED DIM "A" Command Bar		PIN "A"	1			
TILT Please select object: Opposite corner:Find out Please select object:	11, total 11	1	1			
DESC Height (H)/Justify(J)/Lac Single(I)/List(L)/ <new h<="" td=""><td>ation(L)/Rotation(R), Weight for all object:</td><td>/Style(S)/Text(T)/Undo(U)/Width(W): H = s&gt;:2.5</td><td>QTY</td></new>	ation(L)/Rotation(R), Weight for all object:	/Style(S)/Text(T)/Undo(U)/Width(W): H = s>:2.5	QTY			
Command:		<b>←</b> □ ►				

Justify: Changes the text justification. Within this option there are several more:

Align (A) / Fit (F) / Center (C) / Left (L) / Middle (M) / Right (R) / TL / TC / ML / MC / MR / BL / BC / BR:

Align: This aligns text according to a specific point.

Fit: Adjust the length of a single text by specifying two points.

Center: Justify the context at the center of the frame area text.

Left: Justify the context at the left of the frame area text.

Middle: Justify the context at the middle of the frame area text.

Right: Justify the context at the right of the frame area text.

TL: Justify the context at the top left of the frame area text.

TC: Justify the context at the top center of the frame area text.

ML: Justify the context at the middle left of the frame area text.

MC: Justify the context at the middle center of the frame area text.

MR: Justify the context at the middle right of the frame area text.


BL: Justify the context at the bottom left of the frame area text.

BC: Justify the context at the bottom center of the frame area text.


BR: Justify the context at the bottom right of the frame area text.

PART LIST				PART LIST		
3 STEEL		Welded ITEM 1-9	В	SMALL BUSHINGS	3	STEEL
1 Q235A				SHAFT	1	Q235A
1 STEEL		16mm. thickness		SUB - BASE PLATE	1	STEEL
1 STEEL		16mm. thickness		MULTI-HOLE BASE PLATE	1	STEEL
1 Q235A		Welded ITEM 8		THREADED SHAFT	1	Q235A
2 Q235A		Welded ITEM 5		BUSHING "B"	2	Q235A
1 STEEL		10,5mm. thickness		SUPPORT PLATE	1	STEEL
1 Q235A		Welded ITEM 5		BUSHING "A"	1	Q235A
1 Q235A		M12 x 1,4 x 104		BMW - THREADED PIN "B"	1	Q235A
1 Q235A		M10 x 2,5 x 100		BMW - THREADED PIN "A"	1	Q235A
1 STEEL		15mm. thickness		TILT PLATE	1	STEEL
QTY MATERIAL	TREATMENT	REMARKS		DESCRIPTION	QTY	MATERIAL
PARTS LIST				PARTS LIST		
BMW CHA	SSIS CL		Α			
	3 STEEL 1 Q235A 1 STEEL 1 STEEL 1 Q235A 2 Q235A 1 STEEL 1 Q235A 1 Q235A 1 Q235A 1 Q235A 1 Q235A 1 Q235A 1 MATERIAL  STAR  BMW CHA	3 STEEL 1 Q235A 1 STEEL 1 STEEL 1 Q235A 2 Q235A 1 STEEL 1 Q235A 1 Q235A 1 Q235A 1 Q235A 1 Q235A 1 STEEL QTY MATERIAL TREATMENT	3   STEEL	3   STEEL	3   STEEL	3   STEEL


Location: Changes the text location by selecting and moving the text frame base point.

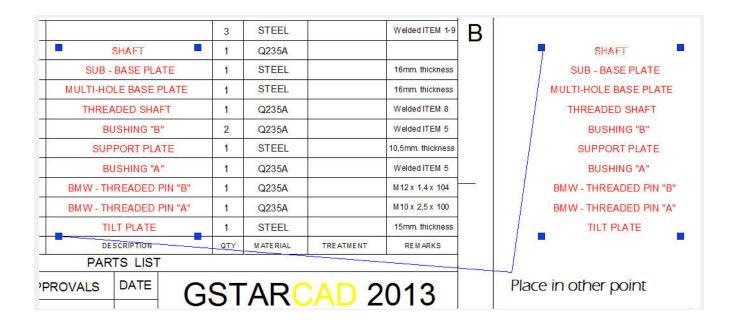

Rotation: Changes the text rotation according to the input value.

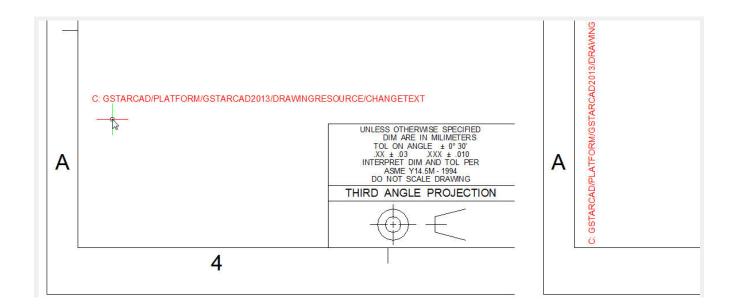

Style: Changes the text style by typing the style name in the command line.

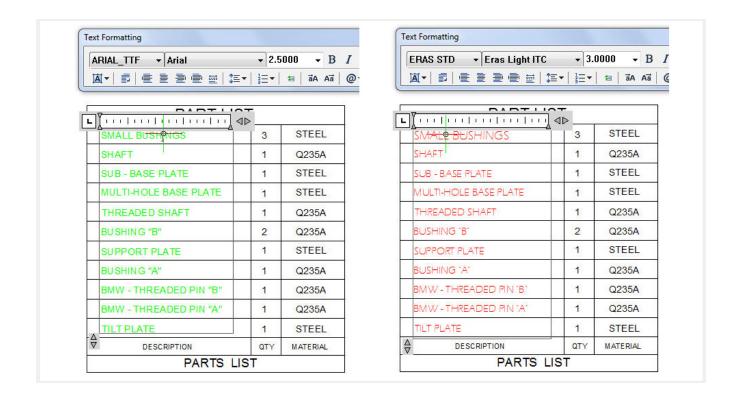

Text : Find and replace text. Within this option there are three more: Single (I) / Re-enter (R) / Global (G):


Single: If you select one or more texts, this will match and change any context within the text selected in sequence (one by one).




Re-enter: This retypes a new content by typing it in the command line and then replaces it.




Global: If you select one or more text, this will match and change any context within a text group selected at once.

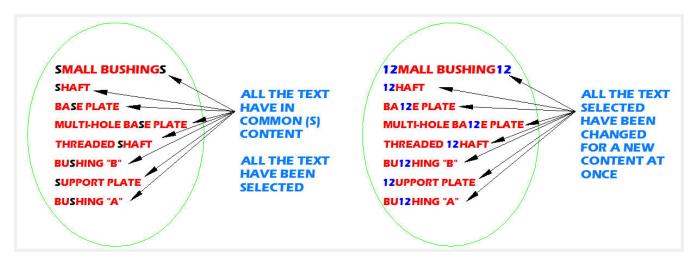

Undo: like CTRL+Z, this will undo an operation after selecting any other.

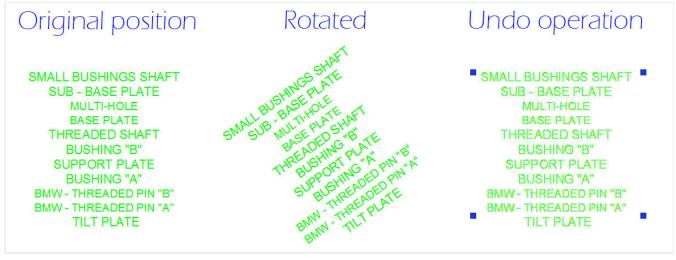

Width: Changes the frame area text by entering a new width factor value.

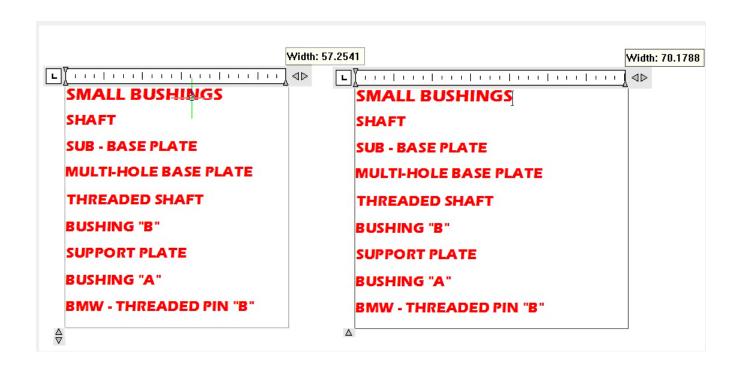

Online URL: <a href="https://www.kb2.gstarcad.com.my/article.php?id=2628">https://www.kb2.gstarcad.com.my/article.php?id=2628</a>