

Scale Text

2636 GstarCAD MY /KW November 11, 2021 [Workflow](#) 0 5070

This command can be used for single line text and multiline text, you can specify scale center and text height with this command.

Menu : Text >Others>Scale Text

Command Entry : SCALETEXT

Operation steps:

- 1.Start the command.
- 2.Select objects which need to scale.
- 3.Specify scale center.
- 4.Specify the text height.
- 5.Press enter to finish scaling.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2636>