

## Change Text Height/Width/Angle/Position

2651 GstarCAD MY /KW November 12, 2021 [Workflow](#) 0 2461

This function is used to modify text height, text width, text angle and text position. You can click or select characters by window selection.

**Menu** : Express>Text Tools>Others>Change Text Height/Width/Angle/Position

**Command Entry** : TXTHEI/TXTWID/TXTANG/TXTPOS

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2651>