

# Detach Leaders from Annotation

2661 GstarCAD MY /KW November 15, 2021 [Workflow](#) 0 1240

Detach leader line from mtext, tolerance, or block reference object.

**Menu** : Express>Dimension>Detach Leaders from Annotation


**Command Entry** : QLDETACHSET

Select objects: Select leader line

Usage Example:

Select a leader line to detach from an mtext object.

Leader with mtext object attached:

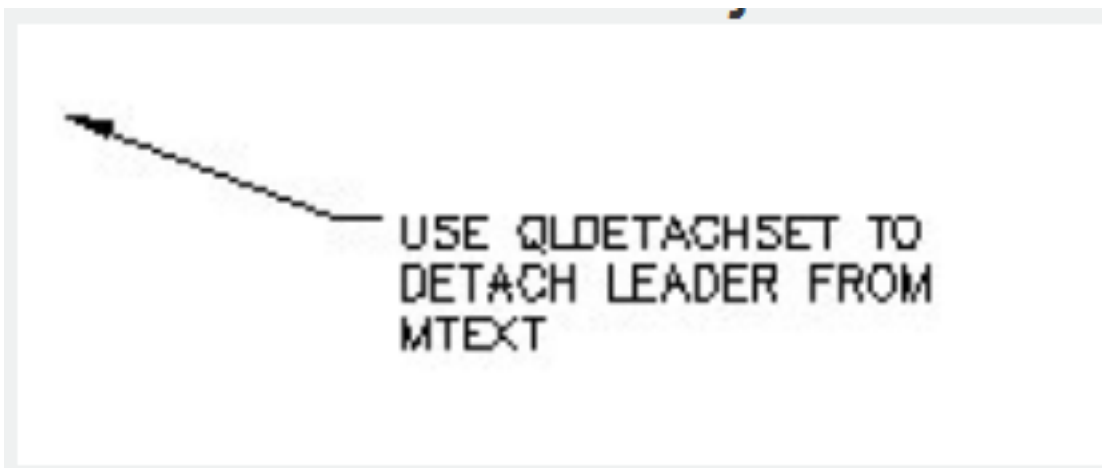

Leader detached from the mtext object, which can then be moved.



Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2661>

