

ZOOMWHEEL System Variable — GstarCAD 2027

ZOOMWHEEL System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > Z System Variables > ZOOMWHEEL

Function Description:

The ZOOMWHEEL system variable is used to switch the transparently zoom direction when scrolling the middle mouse wheel.

Type	Integer
Saved in	Registry
Initial value	0
Range	0,1

System Variable Value:

- 0:** move wheel forward to zoom in; move wheel backwards to zoom out
- 1:** move wheel forward to zoom out; move wheel backwards to zoom in

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2778>