

QPMODE System Variable — GstarCAD 2027

QPMODE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > Q System Variables > QPMODE

Function Description:

The QPMODE system variable is used to specify whether to display quick property palettes when selected objects.

Type	Integer
Saved in	Registry
Initial value	-1
Range	-2 ~ 2

System Variable Value:

- 0:** turn off quick property palettes for all objects when selected all objects in drawing area
 - 1:** turn on quick property palettes for all objects when selected all objects in drawing area
 - 2:** turn on quick property palettes for objects that supportable in CUI editor for convenient displaying when selected
- Note:** if specified a negtive value for this system variable, turn off it but keep the value. Specify PICKFIRST system variable to be 1 to enable QPMODE.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2798>