

QVDRAWINGPIN System Variable — GstarCAD 2027

QVDRAWINGPIN System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > Q System Variables > QVDRAWINGPIN

Function Description:

The QVDRAWINGPIN system variable is used to control the default display state of preview images of drawing.

Type	Integer
Saved in	Drawing
Initial value	0
Range	0,1

System Variable Value:

- 0:** display preview images of drawing in an unpinned state
- 1:** display preview images of drawing in a pinned state

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2800>