

Raster Images — GstarCAD 2027

2830 kbadmin September 25, 2026 [User Guide](#) 0 5

Raster Images

[GstarCAD 2027](#) · [User Guide](#)

User Guide > Raster Images

Raster images consist of a rectangular grid of small squares or dots known as pixels. Raster images can be added in a drawing by inserting image files or pasting as OLE. Raster images can be copied, moved, and support the follow formats: BMP (.bmp, .dib, .rle) CALS-I(.gp4, .mil, .rst, .cg4, .cal) JPEG (.jpg, .jpeg) PCX (.pcx) PNG (.png) TIFF (.tif or .tiff)

[Overview of Raster Images](#)

[Attach and Detach Raster Images](#)

A raster image file can be attached and detached to a drawing file. Once an image is detached, all instances of the image are removed from the drawing.

[Show and Hide Raster Image Boundaries](#)

You can control whether the clipping boundaries of a raster image are displayed or hidden by performing the command IMAGEFRAME and setting up the values 1 or 2.

[Clip Raster Images](#)

If you want to display only parts of images, you can clip the images by IMAGECLIP with polygonal, rectangular or closed polyline.

[Change Raster Image Brightness, Contrast and Fade](#)

You can change several display properties of raster images, such as brightness, contrast, fade and transparency.

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2830>