

XEDIT System Variable — GstarCAD 2027

XEDIT System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > X System Variables > XEDIT

Function Description:

The XEDIT system variable is used to control whether the current drawing can be in-place edited or not when it is referenced by another drawing.

Type	Integer
Saved in	Drawing
Initial value	1
Range	0,1

System Variable Value:

- 0:** prevent in-place reference editing
- 1:** allow in-place reference editing

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2843>