

XLOADCTL System Variable — GstarCAD 2027

XLOADCTL System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > X System Variables > XLOADCTL

Function Description:

The XLOADCTL system variable is used to open or close the demand-loading function for xref, and also control whether to open the drawing or its copy.

Type	Integer
Saved in	Registry
Initial value	2
Range	0,1,2

System Variable Value:

- 0:** close demand-loading; load entire drawing
 - 1:** open demand-loading. Open and lock xref drawing.
 - 2:** open demand-loading. Open and lock copy of xref drawing; do not lock xref drawing.
- When specified it to be 2, copy of each xref drawing file will be stored in the file folder or temporary file folder specified by XLOADPATH system variable.
- For cross network operation, the speed of loading xref is fast; open a drawing attached several xrefs, this improved performance is obvious.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2845>