

# XREFTYPE System Variable — GstarCAD 2027

## XREFTYPE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > X System Variables > XREFTYPE

### Function Description:

The XREFTYPE system variable is used to control the default reference type when attaching or overlaying external reference.

|               |          |
|---------------|----------|
| Type          | Integer  |
| Saved in      | Registry |
| Initial value | 0        |
| Range         | 0,1      |

### System Variable Value:

- 0:** attachment is the default
- 1:**overlay is the default

### Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2850>