

WORLDVIEW System Variable — GstarCAD 2027

WORLDVIEW System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > W System Variables > WORLDVIEW

Function Description:

The WORLDVIEW system variable is used to determine whether it is relative to WCS (by default) or current UCS when entering under DVIEW and VPOINT commands.

Type	Integer
Saved in	Drawing
Initial value	1
Range	0,1

System Variable Value:

- 0:** UCS remains unchanged
- 1:** UCS switches to WCS when executing commands; relative to current UCS when entering commands

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2859>