

WRITESTAT System Variable — GstarCAD 2027

WRITESTAT System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > W System Variables > WRITESTAT

Function Description:

The WRITESTAT system variable is used to indicate whether the drawing file is Read only or editable. (Read-Only)

Type	Integer
Saved in	Not saved
Initial value	1
Range	0,1

System Variable Value:

- 0: write to drawings disabled
- 1: enable to write to drawings

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2860>