

WSAUTOSAVE System Variable — GstarCAD 2027

WSAUTOSAVE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > W System Variables > WSAUTOSAVE

Function Description:

The WSAUTOSAVE system variable is used to save all changes of work space when switching to another work space.

Type	Parameter
Saved in	Registry
Initial value	0
Range	0,1

System Variable Value:

- 0:**off
- 1:** on

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2861>