

NAVVCUBEDISPLAY System Variable — GstarCAD 2027

2890 kbadmin September 25, 2026 [System Variable Reference](#) 0 11

NAVVCUBEDISPLAY System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > N System Variables > NAVVCUBEDISPLAY

Function Description:

The NAVVCUBEDISPLAY system variable is used to control the display of the NaviCube in the current visual style and in the current viewport.

Type	Integer
Saved in	Drawing
Initial value	3
Range	0,1,2,3

System Variable Value:

- 0:**
not displayed in 2D and 3D visual styles
- 1:** displayed in 3D visual styles, but not in 2D visual styles
- 2:**
displayed in 2D visual styles, but not in 3D visual styles
- 3:**
displayed in both 2D and 3D visual styles

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2890>