

NAVVCUBEORIENT System Variable — GstarCAD 2027

2893 kbadmin September 25, 2026 [System Variable Reference](#) 0 9

NAVVCUBEORIENT System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > N System Variables > NAVVCUBEORIENT

Function Description:

The NAVVCUBEORIENT system variable is used to control whether the ViewCube tool reflect current UCS or WCS.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1

System Variable Value:

- 0:** reflect WCS
- 1:** reflect UCS

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2893>