

NEXTFIBERWORLD System Variable — GstarCAD 2027

2897 kbadmin September 25, 2026 [System Variable Reference](#) 0 8

NEXTFIBERWORLD System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > N System Variables > NEXTFIBERWORLD

Function Description:

The NEXTFIBERWORLD system variable is used to control the switching between fiber mode and thread mode in the interactive system.

Type	Integer
Saved in	Registry
Initial value	1
Range	0/1

System Variable Value:

- 0:** Thread Mode.
- 1:** Fiber Mode.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2897>