

NORTHDIRECTION System Variable — GstarCAD 2027

2899 kbadmin September 25, 2026 [System Variable Reference](#) 0 12

NORTHDIRECTION System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > N System Variables > NORTHDIRECTION

Function Description:

The NORTHDIRECTION system variable is used to specify the angle between the Y axis of WCS and north of grid.

Type	Real
Saved in	Drawing
Initial value	0.0000

This system variable is not affected by AUNITS and AUPREC.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2899>