

REFPATHTYPE System Variable — GstarCAD 2027

REFPATHTYPE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > R System Variables > REFPATHTYPE

Function Description:

The REFPATHTYPE system variable is used to control whether reference files are attached using full, relative or no paths when they are first attached to a host drawing file.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1,2

System Variable Value:

- 0: Uses no path as default.
- 1: Uses relative path as default.
- 2: Uses full path as default.

NOTE: This system variable has no effect on references that are already attached to the host drawing.