

RTDISPLAY System Variable — GstarCAD 2027

RTDISPLAY System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > R System Variables > RTDISPLAY

Function Description:

The RTDISPLAY system variable is used to control the display of raster images and OLE objects when running ZOOM or PAN commands.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1

System Variable Value:

- 0:** display raster images and OLE contents
- 1:** only display profiles

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2942>