

EDGEMODE System Variable — GstarCAD 2027

EDGEMODE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > E System Variables > EDGEMODE

Function Description:

The EDGEMODE system variable is used to control the way to determine the edge of boundary or the edge to trim when executing the TRIM and EXTEND commands.

Type	Integer
Saved in	Registry
Initial value	0
Range	0,1

System Variable Value:

- 0:**use the selected edge without extension line
 - 1:** use the selected edge without extension line
- Line, arc, ellipse arc, xline or polyline are all natural extension objects.
The natural extension of line and xline are infinite line.
The natural extension of arc is a circle.
The natural extension of ellipse arc is an ellipse.
The polyline can be split to be lines and arcs, and naturally extents to their boundaries.

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2991>