

ERSTATE System Variable — GstarCAD 2027

ERSTATE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > E System Variables > ERSTATE

Function Description:

The ERSTATE system variable is used to indicate the "External Reference" palettes turns on or off.
(Read-Only)

Type	Integer
Saved in	Not saved
Initial value	Unknown
Range	0,1

System Variable Value:

0:Off
1:On

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2997>