

EXPLMODE System Variable — GstarCAD 2027

EXPLMODE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > E System Variables > EXPLMODE

Function Description:

The EXPLMODE system variable is used to control whether the EXPLODE command supports non-uniformly scaled blocks.

Type	Integer
Saved in	Not saved
Initial value	1
Range	0,1

System Variable Value:

- 0:** do not explode non-uniformly scaled blocks
- 1:** explode non-uniformly scaled blocks

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2999>