

EXPORTEPLOTFORMAT System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > E System Variables > EXPORTEPLOTFORMAT

Function Description:

The EXPORTEPLOTFORMAT system variable is used to set the default export format for electronic files:PDF, DWF or DWFX.

Type	Integer
Saved in	User-settings
Initial value	2
Range	0,1,2

System Variable Value:

- 0:PDF
- 1: DWF
- 2:DWFX

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3000>